

Enabled dual camera (Raspberry pi 5)

When you can only see one of both cameras:

```
rpicam-hello --list-cameras
```

<https://docs.arducam.com/Raspberry-Pi-Camera/Pivariety-Camera/Libcamera-User-Guide/#introduction> 123 to do:



```
install_pivariety_pkgs.sh -p libcamera_dev  
install_pivariety_pkgs.sh -p libcamera_apps  
install_pivareity_pkgs.sh -p kernel_driver
```

Revision #5

Created 17 May 2026 07:29:08 by Tim

Updated 17 May 2026 08:48:18 by Tim